

© 2013 All Rights Reserved

Acer Liquid Z5 Quick Guide

Model : Z 150

This revision: 11/2013

Product Information

For detailed product information, please go to www.acer.com.

For service and support information, or to download the User Guide, drivers and applications, please follow the instructions below:

1. Go to www.acer.com and click **Support > DRIVERS AND MANUALS**.
2. Select appropriate items from **Select Product Family > Select Product Line > Select Product Model**.
3. Select the operating system from the drop-down menu.

Acer Liquid Z5 Smartphone

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Table of Contents

Part I : Technical Information	1
1. Summary	1
2. Specifications	2
2.1 Specification Sheet	2
2.2 Operation Characteristic Curve	6
2.3 Capacity Variation Ratio According to Temperature	6
2.4 Cooling and Heating Data Sheet in Rated Frequency	7
2.5 Noise Curve	7
3. Outline Dimension Diagram	8
3.1 Indoor Unit	8
3.2 Outdoor Unit	9
4. Refrigerant System Diagram	10
5. Electrical Part	11
5.1 Wiring Diagram	11
5.2 PCB Printed Diagram	14
6. Function and Control	16
6.1 Remote Controller Introduction	16
6.2 Brief Description of Modes and Functions	19
Part II : Installation and Maintenance	24
7. Notes for Installation and Maintenance	24
8. Installation	26
8.1 Installation Dimension Diagram	26
8.2 Installation Parts-checking	28
8.3 Selection of Installation Location	28
8.4 Electric Connection Requirement	28
8.5 Installation of Indoor Unit	28
8.6 Installation of Outdoor Unit	31
8.7 Vacuum Pumping and Leak Detection	32
8.8 Check after Installation and Test Operation	32

APPLICATION OF PULSE OUTPUT

PROCESS INTEGRATION



Pulse output from MF1676-230VAC / MF1676-C meter can be interfaced into a process through a PLC for control of energy consumed in the process. If the PLC has a self-excited digital input, external DC supply is not needed.

The kWh pulse is also used to derive average kWh information of the PLC.

ENERGY CONTROLLER



Pulse output from MF1676-230VAC / MF1676-C meter can be used as alarm generator or total energy controller by interfacing with a pre-settable counter and control circuitry (Comparator, Relay, Trip Circuit).

The counter is loaded with the maximum energy consumption, till an alarm message is sent it provides output-control circuit to take appropriate action.

Note: + and - is applicable only for MF1676-C.

MODBUS REGISTER ADDRESSES LIST

Available parameters for Communication valid only for MF1676-C. Length (Register): 2; Data Structure: Float

Address	Hex Address	Parameter
20000	0x50	Voltage V1N
20002	0x52	Voltage V2N
20004	0x54	Voltage V3N
20006	0x56	Average Voltage V1N
20008	0x58	Voltage V1S
20010	0x5A	Voltage V2S
20012	0x5C	Voltage V3S
20014	0x5E	Average Voltage V1S
20016	0x60	Current I1
20018	0x62	Current I2
20020	0x64	Current I3
20022	0x66	Average Current
20024	0x68	WFI
20026	0x6A	MIR
20028	0x6C	MIR
20030	0x6E	MIR
20032	0x70	WFI
20034	0x72	WFI
20036	0x74	WFI
20038	0x76	WFI
20040	0x78	WFI
20042	0x7A	WFI
20044	0x7C	WFI
20046	0x7E	WFI
20048	0x80	WFI
20050	0x82	WFI
20052	0x84	WFI
20054	0x86	WFI
20056	0x88	WFI
20058	0x8A	WFI
20060	0x8C	WFI
20062	0x8E	WFI
20064	0x90	WFI
20066	0x92	WFI
20068	0x94	WFI
20070	0x96	WFI
20072	0x98	WFI
20074	0x9A	WFI
20076	0x9C	WFI
20078	0x9E	WFI
20080	0xA0	WFI
20082	0xA2	WFI
20084	0xA4	WFI
20086	0xA6	WFI
20088	0xA8	WFI
20090	0xAA	WFI
20092	0xAC	WFI
20094	0xAE	WFI
20096	0xB0	WFI
20098	0xB2	WFI
20100	0xB4	WFI
20102	0xB6	WFI
20104	0xB8	WFI
20106	0xBA	WFI
20108	0xBC	WFI
20110	0xBE	WFI
20112	0xC0	WFI
20114	0xC2	WFI
20116	0xC4	WFI
20118	0xC6	WFI
20120	0xC8	WFI
20122	0xCA	WFI
20124	0xCC	WFI
20126	0xCE	WFI
20128	0xD0	WFI
20130	0xD2	WFI
20132	0xD4	WFI
20134	0xD6	WFI
20136	0xD8	WFI
20138	0xDA	WFI
20140	0xDC	WFI
20142	0xDE	WFI
20144	0xE0	WFI
20146	0xE2	WFI
20148	0xE4	WFI
20150	0xE6	WFI
20152	0xE8	WFI
20154	0xEA	WFI
20156	0xEC	WFI
20158	0xEE	WFI
20160	0xF0	WFI
20162	0xF2	WFI
20164	0xF4	WFI
20166	0xF6	WFI
20168	0xF8	WFI
20170	0xFA	WFI
20172	0xFC	WFI
20174	0xFE	WFI

Address	Hex Address	Parameter
20176	0x100	THD of Voltage V1N
20178	0x102	THD of Voltage V2N
20180	0x104	THD of Voltage V3N
20182	0x106	THD of Voltage V1S
20184	0x108	THD of Voltage V2S
20186	0x10A	THD of Voltage V3S
20188	0x10C	THD of Current I1
20190	0x10E	THD of Current I2
20192	0x110	THD of Current I3
20194	0x112	THD of Current I1
20196	0x114	THD of Current I2
20198	0x116	THD of Current I3
20199	0x117	Serial number of unit

Cleaning and Care	37
Outside of the appliance	37
Oven interior	37
Accessories	37
Fat Filter	37
Shelf Support Rails	38
Oven Lighting	39
Oven Ceiling	40
Oven Door	41
Oven Door Glass	42
What to do if	44
Installation Instructions	45
Safety information for the installer	45
Guarantee Conditions	49
Customer Service Centres	50
Service	51



150N Wireless USB Adapter

Install Utility and Driver

View User Manual

View Quick Installation Guide

Install Adobe® Acrobat

150N

Browse CD


Exit

Note: If the Autorun screen doesn't appear automatically, or if you get a blank white screen, go to **Start, Run,** and type **D:\Utility\Setup.exe** (where **D** is the letter of your CD drive) and click **OK**.

Windows Vista users: At this point, you may get a warning message like the one below. Make sure that you click **Allow** to continue with the installation.

ADVERTENCIA

PARA REDUCIR EL RIESGO DE INCENDIOS O SACUDIDAS ELECTRICAS, NO EXPONGA ESTE APARATO A LA LLUVIA NI A LA HUMEDAD.



Explicación de los símbolos gráficos:



El símbolo del relámpago con la punta en flecha dentro de un triángulo equilátero, sirve para alertar al usuario de la presencia de "tensión peligrosa" sin aislar en el interior de la caja del aparato, la cual podrá ser lo suficientemente fuerte como para suponer un riesgo de sacudida eléctrica a personas.



El signo de exclamación dentro del un triángulo equilátero sirve para alertar al usuario de la presencia de instrucciones importantes de operación y mantener atento (servicio) en la información que acompaña al aparato.

PARA EL REGISTRO DEL DUEÑO

Para su comodidad, anote el número del modelo (el cual lo encontrará en la parte de abajo de la unidad) y el número de serie (el cual lo encontrará en el compartimento de la batería) en el espacio dado a continuación. Por favor, en caso de dificultad, Ud. comunique al repartidor de AWWA, las referencias de número del modelo y número de serie.

No del modelo

No de serie

Precauciones

Antes de utilizar la unidad, lee cuidadosa y completamente este manual de instrucciones. Guarde el manual de instrucciones para futuras referencias. Todos los avisos y precauciones del manual de instrucciones y de la unidad deberán seguirse estrictamente, así como las sugerencias de seguridad indicadas a continuación.

Instalación

- Agua y humedad** - No utilice esta unidad cerca del agua, como al lado de una bañera, un lavabo, el fregadero de la cocina, una lavadora, ni en un sótano húmedo, una piscina, etc.
- Caleor** - No utilice esta unidad cerca de fuentes térmicas, como salidas de calefacción, estufas, ni demás aparatos que generen calor. Además, no deberá colocarse en lugares con temperaturas inferiores a 5°C ni superiores a 35°C.
- Superficie de montaje** - Coloque la unidad sobre una superficie plana y nivelada.
- Ventilación** - La unidad deberá colocarse con espacio suficiente a su alrededor para asegurar una ventilación adecuada. Deje una separación de 10 cm desde las partes posterior y superior de la unidad, y 5 cm desde cada lado.
 - No la coloque sobre una cama, una alfombra, ni nada similar que pueda bloquear las aberturas de ventilación.
 - No la instale en una librería, un armario, ni un bastidor cerrado, donde la ventilación pudiera ser deficiente.

6 ESPAÑOL

- Introducción de objetos y líquidos** - Tenga cuidado de que en el interior de la unidad no entre objetos pequeños ni líquidos a través de las aberturas de ventilación.
- Carritos y estantes** - Utilice la unidad solamente con un carrito o un estante recomendado por el fabricante. Cuando la haya colocado o montado sobre un estante o un carrito, deberá moverla con cuidado.



- Las paradas repentinas, la fuerza excesiva, o las superficies desiguales podrían causar el vuelco o la caída de la combinación de la unidad y el carrito.
- Condensación de humedad** - En el objetivo del captor del reproduccion de discos compactos puede condensarse humedad cuando:
 - Traslade la unidad de un lugar frío a otro cálido.
 - Conecte el sistema de calefacción.
 - Utilice la unidad en una sala muy húmeda.
 - Enfríe la sala con un acondicionador de aire.Quando se haya condensado humedad en el interior de esta unidad, es posible que no funcione normalmente. Quando ocurra esto, deje la unidad durante algunas horas, y después trate de volver a utilizarla.
 - Montaje en una pared o en un techo** - La unidad no deberá montarse en una pared ni en un techo a menos que se especifique en el manual de instrucciones.

Energía eléctrica

- Fuentes de alimentación** - Utilice pilas o la corriente de la red de CA, como se especifica en el manual de instrucciones, y como está marcado en la unidad.
- Polarización** - Como medida de seguridad, algunos aparatos cuentan con enchufes de corriente polarizados, los cuales pueden enchufarse en el tomacorriente solamente en una dirección. Si cuesta o resulta imposible insertar el enchufe en la toma de corriente, dé vuelta el enchufe y vuelva a probar. Si incluso después de cambiar no se puede enchufar con facilidad, pida a un técnico calificado que repare o cambie la toma de corriente. No inserte el enchufe a la fuerza, para evitar anular la protección de seguridad del enchufe polarizado.
- Cable de alimentación de CA**
 - Para desconectar el cable de alimentación de CA, tire de su enchufe. No tire nunca del propio cable.
 - No tome nunca el cable de alimentación de CA con las manos húmedas, ya que esto podría resultar en incendios o descargas eléctricas.
 - Los cables de alimentación deberán asegurarse firmemente para evitar que se doblen, queden pillados, o alguien pueda pisarlos. Preste especial atención al cable que va de la unidad al tomacorriente.
 - Evite sobrecargar los cables de alimentación de CA y los cables prolongadores por encima de su capacidad, ya que esto podría resultar en incendios o descargas eléctricas.
- Cable de extensión** - Para evitar el riesgo de descargas eléctricas, no utilice enchufes de corriente polarizados con cables de extensión, receptáculos u otras tomas de corriente, salvo que el enchufe pueda insertarse por completo y así evitar que queden expuestos los contactos eléctricos.
- Períodos sin utilización** - Quando no vaya a utilizar la unidad durante varios meses, desconecte el cable de alimentación de CA del tomacorriente o extráigale todas las pilas. Cuando el cable de alimentación esté enchufado, circulará una pequeña corriente por la unidad, incluso aunque su alimentación esté desconectada.

Mantenimiento

Limpie la unidad solamente como se recomienda en el manual de instrucciones.


Daños que requieren servicio

Haga que la unidad sea revisada por un técnico de servicio calificado si:

- Se ha dañado el cable de alimentación o el enchufe.
- En el interior de la unidad han entrado objetos extraños o líquidos.
- La unidad ha estado expuesta a la lluvia o al agua.
- La unidad parece no funcionar normalmente.
- La unidad presenta un cambio notable en su rendimiento.
- La unidad ha caído o se ha dañado su caja.

NO INTENTE REPARAR USTED MISMO LA UNIDAD.

Quick Installation Guide of Acer WLAN 11b Broadband Router

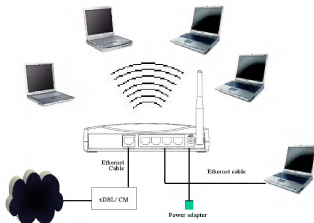



The wireless network diagram of Acer WLAN 11b Broadband Router

Reference

Please consult the user's manual of Acer WLAN Broadband Router for detailed and complete operation guide.

4-2 Wall Mount Dimension Specification

The back of the display is equipped with four screw-holes and matching tapped holes, and a VESA dimension of 400mm x 200mm. Firmly secure using the 4 M6 screws on the device (M6 screws have a maximum length of 35mm).

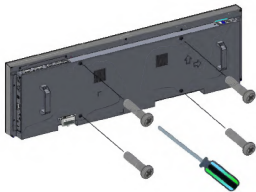



Management (Computer/Video Mode)

If user or administrator forgot "User Password" or even "Administrator Password", do the following to retrieve the "Administrator Password":



1. Press "MENU" for more than 4 seconds when any of "Enter Password" or "Enter Administrator Password" dialogue is currently displayed.



2. Write down the "Unlock ID" and contact with Acer service center. They will give you new Administrator Password according to the Unlock ID.
3. Once the new "Administrator Password" retrieved from Acer has been logged into the projector, old "Administrator Password" will be replaced by the new password.



Reset

Press the  button after choosing "Yes" to return the display parameters on all menus to the factory default settings.

- | | |
|-------------------|--|
| | right or to the left to make various adjustment. |
| 8. Fn | Press to select FM station mode. |
| 9. REC | Press to start or stop the FM or voice recording. |
| 10. MIC | Microphone |
| 11. Earphone Jack | Plug the supplied earphone here. |
| 12. Line-in Jack | Accepts input from external microphones, or other audio line-in devices (e.g audio CD players, stereo walkman and etc.). |



Addendum 1

I-Point Operation Monitoring

The I-Point Antenna control system is designed to be very simple to operate and is expected to be fully automatic in acquiring the required satellite signals.

However the system does not provide very much user feedback if the satellite acquisition operation does not complete.

This document is intended to provide method to gather information on the progress of the satellite acquisition.

1 Serial Communication

To communicate with the i-Point system a PC with a serial port is required. The information below described the use of hyper-terminal as a "terminal emulator", but any similar program could be used instead.

One unusual point about the serial interface is that the UIU front panel will keep trying to take control of the interface. When this happens you may see "garbage characters" generated. To reduce the effects of this type an extra "carriage return" every 10 seconds or so. The normal serial parameters are 19200,n,8,1 but mobile systems which connect the UIU to a DVBRCs modem are typically set to 4800,n,8,1. The Baud rate can be changed via the UIU front panel.

Press the buttons as follows:-

Down arrow *6 Display Shows "User Setup"
Enter Display Shows "Final Pol"
down arrow *4 Display Shows "GPS Output"
Enter Display Shows "4800"
Enter, Display Show "19200".
Clear, Return to main menu.

This baud rate change is not stored. The next time the system is power cycled the baud rate will revert to normal operation.

The connection is taken from the RJ-11 front panel connector on the i-Point User Interface Unit. A cable can be supplied but connection details are shown below.

RJ-11 TO 9-PIN D-Type Socket ADAPTER CABLE

To connect a PC to the UIU Front Panel M&C connector use this adapter cable. Adapter cables must be individually wired. Follow the pin out listed in table below.

The diagram shows the pin out for the RJ-11 connector, looking into the socket on the panel. This is a 6 pin version of the RJ-11 connector, sometimes known as an RJ-12


D Connector Signal RJ-11 Connector

Pin 1 Common Pin 5
Pin 2 Term Data IN Pin 3
Pin 3 Term Data OUT Pin 2
Pin 5 Ground Pin 1
Pin 6 Not Used Pin 4
Do Not Connect +5VDC @ 100 mA Pin 6
Same table in RJ-11 order

3.2 How to use up-link port

With up-link port you can use it to cascade to another switch to expand your network. Please refer to the following procedure.

1. Use one end of UTP to connect to the 16th /24th up-link port of ALH-316ds/324ds
2. Use the other end to connect to the normal port of the new switch
3. Make sure the Link LED is lit then it will work normally.



3.3 Network topology for AcerHub ALH-316ds/324ds

The factors for ALH-316ds/324ds dual-speed network implementation are:

- For stand-alone one, the ALH-316ds/324ds consists of separate 10Mbps and 100Mbps network domains with one built-in switch to inter-connect the data in domains, as shown in Figure 3-2.





Figure 3-2 Separate domains in ALH-316ds/324ds

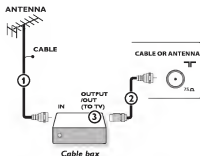

- Cable TV


Connect the cable TV signal to the **CABLE/ANTENNA 75 Ω** jack at the bottom of the TV. See page 13 for details on using Autoprogram to store channels in the TV's memory.

Note: This connection will supply stereo sound to the TV if the station you are viewing broadcasts stereo sound.

- Cable box with RF IN/OUT

- Connect the incoming cable TV signal to the cable **IN** jack ① on the back of the cable box.
- Connect a coaxial cable (not supplied) from the **TO TV** jack on the back of the cable box to the **CABLE/ANTENNA 75 Ω** jack ② at the bottom of the TV.
*Note: Your cable box may have a different label for the TO TV jack. Commonly used labels include **OUTPUT** or **OUT**.*
- Set the **OUTPUT CH** switch ③ on the cable box to **CH 3** or **4** (whichever is correct for your cable box). Next, tune the TV to the corresponding channel. Once tuned, change channels using the cable box, not the TV.

*Note: This connection will not supply stereo sound to the TV. The reason is that the RF output on a cable box - labeled **TO TV**, **OUT** or **OUTPUT** for example - will not send a stereo signal to the tuner (VHF/UHF) input on a TV.*

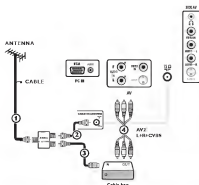

Watching cable TV programs that don't require the use of a cable box.

Since you've connected the cable TV signal directly to the TV's tuner, you can also watch unscrambled programs by simply tuning to the desired channel; however, you must first use Auto program to store available channels in the TV's memory. (p. 13)

Note: This connection will supply stereo sound to the TV if the station you are viewing broadcasts stereo sound.

- Cable box with A/V outputs

- Connect the incoming cable TV signal ① to a signal splitter (not supplied). The signal splitter enables you to avoid having to use the TO TV jack on the back of the cable box. This jack will not supply stereo sound to the TV.
*Note: Your cable box may have a different label for the TO TV jack. Commonly used labels include **OUTPUT** or **OUT**.*
- Connect a coaxial cable (not supplied) to a connector on the signal splitter and to the **CABLE/ANTENNA 75 Ω** jack ② on the TV.
- Connect another coaxial cable (not supplied) to a connector on the signal splitter and to the cable **IN** jack ③ on the back of the cable box.
- Connect A/V cables (not supplied) to the **VIDEO IN** and **AUDIO L** and **R** outputs on the back of the cable box and to the **AV2** or **Side AV** video (labeled **VIDEO IN**) and **AUDIO** (labeled **L** and **R**) jacks ④ on the back of the TV.
- To view programs from your cable box, first press the **SOURCE** button on the remote control.
- Press the cursor down or up buttons until the **AV2** or **Side AV** signal source is selected.
- Press the **OK** button to confirm your selection. The **AV2** or **Side AV** input source becomes current for the viewing of cable TV programs through your cable box.

*Note: If your cable box audio/video outputs do not supply video and stereo audio to the TV, you will need to make the connection shown above in "Cable box with **RF IN/OUT***

In use

Nearby points of interest

If you are running low on gas, need a bank or are looking for a restaurant, CoPilot Live has over 6 million pre-loaded Points-of-Interest (POI) to search.



- Select **Menu > Nearby POI**
- From the list, select a category. For example, Gas Station.

After a few moments a list of nearby gas stations will appear, in order of distance from your current location.

- Select the gas station you wish to visit and tap **OK**. A preview map of the route to your selected POI will appear.
- Tap **Drive** to begin navigating the route.

Tip: Call ahead

You can call direct to a selected POI once you have found a POI, select it then tap **Details**. If the phone number for this POI is available the **Call** button will be available. Tap **Call** to ring the POI via your mobile device.



Tip: POI in the city

You can search for a POI within a city, near your current location or along your route by pressing **Menu > Destination > Points of Interest**.

You can search for a particular POI within a category, by name. For more details, see on [page 15](#).





[Auto format] For selected models (Not for PC mode) Automatically display the suitable picture format if not, widescreen is applied



[Auto fill] For selected models Adjust the picture to fill the screen (subtitles remain visible). Recommended for minimal screen distortion but not for HD or PC



[Auto zoom] For selected models Enlarge the picture to fill the screen. Recommended for minimal screen distortion but not for HD or PC



[Super zoom] (Not for HD and PC mode)
Remove the black bars on the side of 4:3 broadcasts. There is minimal distortion.



[Subtitle zoom] Displays 4:3 pictures over the full area of the screen with subtitles visible. Part of the top of the picture is clipped off



[4:3] Show the classic 4:3 format.



[Movie expand 149] (Not for HD and PC mode)
Scale 4:3 format to 14:9



[Movie expand 169] (Not for HD and PC mode)
Scale 4:3 format to 16:9



[Wide screen] Scale 4:3 format to 16:9



[Unscaled] For HD and PC mode only and in selected models only Allow maximum sharpness. Some distortion may be present due to the broadcaster's systems. Set your PC resolution to wide screen mode for best results

Use smart sound

Use smart sound to apply pre-defined sound settings

- 1 Press **III** **ADJUST**
- 2 Select **[Smart sound]**, then press **OK**
- 3 Select one of the following settings, then press **OK**.
 - **[Personal]** Apply the settings that were customised in the sound menu
 - **[Standard]** Settings that suit most environments and types of audio.
 - **[News]** Ideal settings for spoken audio, such as news
 - **[Cinema]** (For selected models) Ideal settings for movies
 - **[Game]** (For selected models) Ideal settings for games
 - **[DRAMA]** (For selected models) Ideal settings for drama programmes
 - **[Sports]** (For selected models) Ideal settings for sports programmes

Manually adjust sound settings


- 1 Press **★**
- 2 Select **[Setup]** > **[TV settings]** > **[Sound]**, then press **OK**.
→ The **[Sound]** menu appears
- 3 Select one of the following settings, then press **OK**.
 - **[Smart sound]** Access predefined smart sound settings
 - **[Reset]** Reset to factory default settings

The Today screen

After rebooting, your smartphone will display the Today screen. This screen gives you quick, icon-based access to many of the frequently-used features of your smartphone.

The first time you start your smartphone, you will see shortcuts and control icons on the screen.

Some of them can be changed, others not.

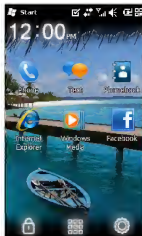

Phone icons

These icons allow you to access basic phone functions. They may not be changed or removed.

Icon	Description
	Opens the phone dialer to make a call.
	Opens the Windows Messaging program so you can send an email, SMS or MMS.
	Opens the Phonebook.

Using the CRCD

This chapter explains how to use the CRCD.


Using the front panel

We designed the CRCD to be easy to use. The front panel display gives clear information about what you are doing and, although there are many sophisticated features, all the most commonly used ones require only one or two key presses.

The illustrations on the following pages explain the function of each of the front panel keys, and the meaning of the different parts of the display.

9

CRCD display and controls

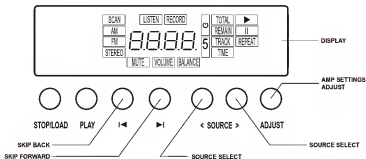


4. Wireless Monitor

This section describes the various functions of the Wireless Monitor that you can configure, including the settings of wireless encryption.

4.1 Wireless Information

The **Wireless Information** box at the top of the window provides you with the status of the current connection, including signal, network name (SSID), IP Address and router channel.

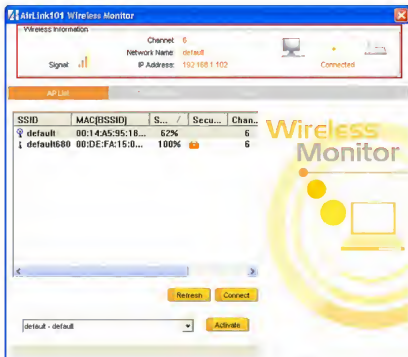

Numeric LED display
Shows Program Number
or Relative Cut/Boost



Technical Specifications

Tables 1 to 3 provide Switch specifications.

<i>Table 1. General Specifications</i>	
Feature	Description
Standards	IEEE 802.3 10 Base-T ethernet IEEE 802.3a 100 Base-TX fast ethernet ANSI/IEEE 802.3 auto-negotiation IEEE 802.3x flow control
Protocol	CSMA/CD
Data transfer rate	Ethernet: 10 Mbps (half duplex), 20 Mbps (full duplex) Fast ethernet: 100 Mbps (half duplex), 200 Mbps (full duplex)
Topology	Star
Network cables	10 Base-T: Two-pair UTP Cat. 3, 4, 5; EIA/TIA-568 100-Ω STP 100 Base-TX: Two-pair UTP Cat. 5; EIA/TIA-568 100-Ω STP 100 Base-FX: 62.5/125 μm multimode fiber optic
Number of ports	32 × 10/100Mbps auto-MDI/MDI-X ports
Expansion slot	One expansion slot for 100 Base-FX


Connecting Power Cord with Three-Wire Plug

NOTE: Four-wire cord is required for mobile homes or where codes do not permit grounding through neutral.


NOTE: The power cord is NOT supplied with the electric dryer. Type of power cord and gauge of wire must conform to local codes and instructions.

The method of wiring the dryer is optional and subject to local code requirements.

NOTE: Connect the dryer to the power supply with the **MAXIMUM RATED VOLTAGE** listed on the nameplate.




NOTE: Use **COPPER WIRE** only.
Shorter than 15 ft. (4.5 m) – use 10 AWG
Longer than 15 ft. (4.5 m) – use 8 AWG

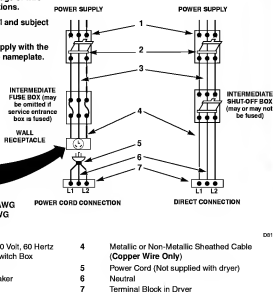

D016


Figure 11

1. Disconnect power to dryer.
2. Remove access cover from rear of dryer.
3. Use a strain relief and insert end of power cord through power supply hole.

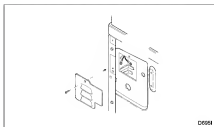

D055

Figure 12

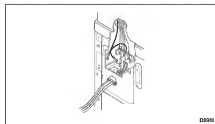

D056

Figure 13

TOWING YOUR AIRSTREAM

SUGGESTED PRE-TRAVEL CHECK LIST

Interior

1. Turn off water pump switch
2. Check battery water level
3. Close windows and vents
4. Lock all interior cabinet doors
5. Latch refrigerator door (best containers first)
6. Hold down or stack securely all loose, hard and sharp objects
7. Fasten sliding and foldable doors
8. Drain toilet bowl.
9. Turn off interior lights
10. Set table in upright position
11. Pull up or retract step.
12. Lower blinds
13. Secure and lock main door

Exterior

1. Disconnect and stow the electrical hookup cord, the sewer hookup hose (flush out), and the water hookup hose.
2. Turn off gas at LP tanks.
3. Retract stabilizing jacks
4. Check Hitch: It must be properly attached.
5. Check safety chains and breakaway switch cable
6. Fully retract jack. Remove and stow jack stand or wood block.
7. Check clearance and stoplights
8. Check lug nuts.
9. Check tires for correct pressure.
10. Check that TV antenna is properly stowed

11. Adjust tow vehicle mirrors.
12. Pull forward some 50 ft., test brakes, and check site for forgotten objects and cleanliness.

NOTICE! CHECK WHEEL LUGS

On first trip, tighten wheel lugs at start and at 10, 25, and 100 miles. Torque aluminum wheels to 110-120 ft. lbs. and steel wheels to 95 ft. lbs. There after, check wheel lugs before each trip, after excessive braking, and following winter storage.

Home

1. Leave house key with your neighbors
2. Valuables and important papers should be stored in a safe place
3. Newspaper, milk and other deliveries should be discontinued.
4. Ask the Post Office to hold your mail for you
5. Arrange with the telephone company for discontinued or "vacation service"
6. Arrange care for your pets
7. Your lawn, garden and houseplants should be cared for
8. Lock all windows and doors securely. Keep shades open for a lived in look
9. Cover all food to keep out mice and insects
10. Eliminate all fire hazards Place matches in a tin box or glass jar
11. Store oil, gasoline and other flammables properly
12. Destroy all newspapers, magazines and city rags
13. Notify police

To clean your pointing device

To clean a regular mouse (with rubber ball)

- 1 Open the circular cover at the base of the mouse.
- 2 Take out the rubber ball and wipe it with a soft, damp cloth.
- 3 Put the ball back and replace the cover.

To clean an optical mouse

For users of an optical mouse, refer to the documentation that came with your mouse for maintenance instructions.

To clean your monitor

Make sure that you keep your screen clean. For cleaning instructions, refer to the documentation that came with your monitor.

When to contact a service technician

- If you dropped and damaged the computer
- If liquid has been spilled into the computer
- If the computer is not operating normally
- If a computer problem persists even after you have checked and applied the troubleshooting tips discussed in the "Frequently asked questions" section on page 10
- If your problem is not listed in the "Frequently asked questions" section on page 10
- If you want to replace or upgrade any of your computer's internal components

Asking for technical assistance

For technical assistance, contact your local dealer or distributor. You may also access the Web site (<http://global.acer.com/support/index.htm>) for information on how and where to contact the service centers available in your area.

Hints and Tips

Normal Operating Sounds

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate/evaporator.
- When the compressor is on, the refrigerant is being pumped round and you will hear a whirring sound or pulsating noise from the compressor.
- A thermostat controls the compressor and you will hear a faint click when the thermostat cuts in and out.

Food Storage

To obtain the best performance from your refrigerator:

- Do not store warm food or evaporating liquids.
- Do not store food uncovered.
- Keep the time between buying chilled food and placing it in your refrigerator as short as possible.
- Do not push food together too much, try to allow air to circulate around each item.



Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the appliance are not obstructed.
- Always leave warm food to cool down to room temperature before placing in the fridge.
- Try to avoid keeping the door open for long periods or opening the door too frequently as warm air will enter the cabinet and cause the compressor to switch on unnecessarily often.
- Ensure there are no obstructions preventing the door from closing properly.

Embedded numeric keypad

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.



Desired Access	Num Lock On	Num Lock Off
Type numbers	Use embedded keypad in the same way as the numeric keypad on a standard keyboard.	
Type letters	Hold Fn while typing letters on embedded keypad.	Type the letters in a normal manner.

Sales and Technical Support

Contact Adtron Corporation for technical support, application questions, data sheets, and documentation. Our normal business hours are Monday through Friday, 8am to 5pm, MST.

Headquarters – Sales

Adtron Corporation
4415 E. Cotton Center Blvd.
Phoenix, AZ 85040
Tel: +1-602-735-0300
Fax: +1-602-735-0359
Web: <http://www.adtron.com>
Email: sales@adtron.com

Europe – Sales

Tel: +41-56-496-5640
Fax: +41-56-496-5648
Email: eurosales@adtron.com

Nordic – Sales

Tel: +45-4557-0754
Fax: +45-4557-0753
Email: nordic@adtron.com

Germany – Sales

Tel: +49-821-589-9914
Fax: +49-821-589-7190
Email: deutsche@adtron.com

United States – Technical Support

Tel: +1-602-735-0300
Fax: +1-602-735-0359
Email: techsupport@adtron.com

Europe – Technical Support

Tel: +45-4557-0754
Fax: +45-4557-0753
Email: eurotech@adtron.com

Web Site

Web: <http://www.adtron.com/support>

Standard Warranty

Adtron warrants this product to be free from defects in materials and workmanship for the duration of the warranty period. If this product fails within the warranty period due to such defect, Adtron will repair or replace this product.

This warranty does not apply if this product has been damaged by abuse, accident, disaster, misuse or incorrect installation.


- 5 Aloita asennus painamalla **OK** -näppäintä. Kaikki digitaaliset palvelut haetaan ja tallennetaan automaattisesti. Kun haku on saatu päätökseen, valikkoon tulee ilmoitus löydettyjen digitaalisten palveluiden lukumäärästä.
- 6 Kun haku on saatu päätökseen, tallenna palvelut **OK** -näppäimellä.
- 7 Palaa edelliseen valikkoon painamalla **◀** -painiketta.
- 8 Poistu valikosta painamalla **MENU** **DIGITAL** -näppäintä.

- 5 Syötä kohdekanavan taajuus **0** **9** -näppäimellä ja aloita kanavien etsintä painamalla **OK**. Kun haku on valmis, valikko näyttää löydettyjen digitaalisten palveluiden määrän.
- 6 Kun haku on saatu päätökseen, tallenna palvelut **OK** -näppäimellä.
- 7 Palaa edelliseen valikkoon painamalla **◀** -painiketta.
- 8 Poistu valikosta painamalla **MENU** **DIGITAL** -näppäintä.

10.3 Palvelujen asentaminen käsin

Tämä valikko antaa selata käsin palveluita tuomalla esiin kohdekanavan taajuuden.

- 1 Näytä asennusvalikko painamalla digitaalisessa tilassa **MENU** **DIGITAL** -näppäintä.
- 2 Valitse Asennus painamalla **▼**-näppäintä ja paina sitten **►**-näppäintä.
- 3 Valitse Palveluasetukset (**▼**) ja paina **►** -näppäintä.
- 4 Valitse Palvelujen asentaminen käsin (**▼**) ja paina nuolinäppäintä **►**.





- **Brightness:** Adjust the display brightness.
- **Contrast:** Adjust the display contrast.
- **Saturation:** Adjust the saturation of the image.
Note: Not available with computer sources.
- **Hue:** Adjust the hue of the image.
Note: Not available with computer sources.
- **BrilliantColor™:** Enables higher brightness while providing true more vibrant colors in the image.
- **Color Temperature:** Select the color temperature. Options are: **Warm**, **Medium**, and **Cold**.
- **Gamma:** Set up gamma curve type. Options are: 1, 2, 3, 4, and 3D.
- **Color Space:** Select an appropriate color matrix type. Options are: **Auto**, **RGB**, and **YCbCr**.

Note: The Color Space function is supported only in HDMI mode.


After your personal access code has been set (see previous page), you are now ready to select the channels or the A/V Inputs you want to block out or censor. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

- 1 Press the CURSOR UP $\wedge$ or DOWN $\vee$ buttons until the words **Block Channel** are highlighted.



v Block Channel On

- 2 Press the CURSOR RIGHT $\>$ button to turn blocking ON or OFF for that channel. When ON is selected the channel will be blocked.




Enter your Access Code to view a tuned channel that is blocked with Block Channel

- 3 Press the CH + or CH - button to select other channels you wish to block. Repeat steps 2-3 to block the new channel.

- 4 When finished, press the STATUS/EXIT button to remove the menu from the screen.

NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.



COMPRESSION CHECK

The compression of a cylinder is good indicator of its internal condition. The decision to overhaul the cylinders is often based on the results of a compression test. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

COMPRESSION

Standard	Limit	Difference in cylinders
1 000 – 1 400 kPa (10 – 14 kg/cm ²) (142 – 199 psi)	800 kPa (8 kg/cm ²) (114 psi)	200 kPa (2 kg/cm ²) (28 psi)

Low compression pressure can indicate any of the following conditions:

- * Excessively worn cylinder wall
- * Worn-down piston or piston rings
- * Piston rings stuck in the grooves
- * Poor seating of valves
- * Ruptured or otherwise defective cylinder head gasket
- * Damaged lash adjuster
- * Starter motor cranks too slowly

Overhaul the engine in the following cases:

- * Compression pressure in one of the cylinders is less than 800 kPa (8 kg/cm², 114 psi).
- * Difference in compression pressure between two cylinders is more than 200 kPa (2 kg/cm², 28 psi).
- * All compression pressure are below 1 000 kPa (10 kg/cm², 142 psi) (standard) even when they measure more than 800 kPa (8 kg/cm², 114 psi).


COMPRESSION TEST PROCEDURE

NOTE:

- * Warm up the engine before testing.

- Remove the cylinder head side cover.
- Remove all the spark plugs.
- Fit the compression gauge ① in one of the plug holes, while taking care that the connection is tight.
- Twist the throttle grip full open.
- Crank the engine a few seconds with the starter, and record the maximum gauge reading as the compression of the cylinder.
- Repeat this procedure with the other cylinder.

09915-64510	Compression gauge
09918-03810	Adapter

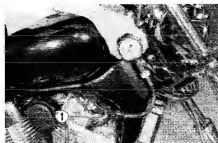

PICTURE




PICTURE	FUNCTION
Picture Mode	Select Dynamic , Cinema , Custom , or Standard Adjust Contrast , Brightness , Sharpness , Tint , and Color .
Backlight	Adjust the Backlight setting.
Color Temperature	Adjust Color Temperature and the Red Gain , Green Gain and Blue Gain .
Gamma	Select a Gamma setting.
Noise Reduction	Adjust Noise Reduction setting.
Adaptive Contrast	Select Adaptive Contrast to ON or OFF.
Over Scan	Adjust Over Scan to AUTO or OFF.
Aspect Ratio	Adjust Aspect Ratio setting. Select 4:3, 16:9, ZOOM, CINEMA, or DOT BY DOT. When Over Scan is set to OFF, you can select 4:3, 16:9, or DOT BY DOT.
Color Range	Adjust Color Range setting.
VGA setting	Adjust H Position , V Position , Clock , and Phase .
Reset Picture Setting	Resets the settings in the Picture menu back to their factory settings.

SCART не підтримує відео високої чіткості та є аналоговим. На телевізорі є один роз'єм SCART: EXT 1.

S-Video – Добра якість ★★

Аналогове з'єднання S-Video забезпечує кращу якість зображення, ніж композитне відеоз'єднання. Під'єднуючи пристрій з інтерфейсом S-Video, вставте кабель S-Video у роз'єм S-Video, що знаходиться збоку на телевізорі. Слід окремо підключити стереофонічний аудіокабель Audio L/R від пристрою до червоного та білого аудіо роз'ємів Audio L/R, які знаходяться на бічній панелі телевізора.



- Кабель S-Video
- Кабель Audio L/R – червоний, білий

Композитний – Базова якість ★

Композитне відео забезпечує базове аналогове з'єднання, зазвичай поєднуючи (жовтий) відеокабель Cinch з (червоним та білим) кабелем Audio L/R Cinch. Під час під'єднання до композитних входів Video та Audio L/R на бічній панелі телевізора дотримуйтесь відповідності кольорам кабелів. Композитний аудіовідеокабель – жовтий, червоний та білий.



Hot-Plug SCSI Hard Drive

To remove a hot-plug SCSI hard drive:

1. Open the front bezel (tower model only). See "Front Bezel" earlier in this chapter.
2. Press the release button ❶ and swing the lever ❷ outward from the bottom.
3. Pull the hot-plug SCSI hard drive out of the bay ❸.


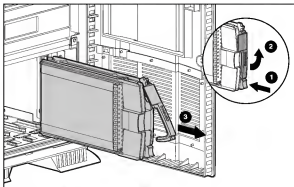


Figure 2-15. Removing a hot-plug SCSI hard drive

Reverse steps 1 through 3 to replace the hot-plug SCSI hard drive.

Board Layout

Your system board should look just like the following figure:

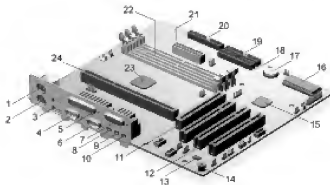

The following table lists the components that you will find on the system board:

No.	Component	No.	Component
1	PS/2 mouse port	13	AD1881 audio chipset
2	PS/2 keyboard port	14	Buzzer
3	USB ports	15	VIA VT82C686A chipset
4	Serial port 1	16	Award BIOS chip
5	Parallel port	17	Battery
6	Serial port 2	18	IDE 2 connector
7	MIDI/Game port	19	IDE 1 connector
8	Speaker-out/Audio-out port	20	Floppy disk drive connector
9	Audio-in port	21	ATX power supply connector
10	Microphone-in port	22	DIMM sockets (three sockets)
11	AGP slot	23	VIA VT82C694X system controller
12	PCI slots (three slots)	24	CPU socket

Cleaning and Care



Take care! Risk of burns from residual heat.



Warning! Sharp objects and abrasive cleaning materials will damage the appliance. Clean with water and washing up liquid.



Warning! Residues from cleaning agents will damage the appliance. Remove residues with water and washing up liquid.

Cleaning the appliance after each use

1. Wipe the appliance with a damp cloth and a little washing up liquid.
2. Rub the appliance dry using a clean cloth.

Removing deposits

1. Place a scraper on the glass ceramic surface at an angle.
2. Remove residues by sliding the blade over the surface.
3. Wipe the appliance with a damp cloth and a little washing up liquid.
4. Rub the appliance dry using a clean cloth.

Type of dirt	Remove		
	immedi- ately	when the appliance has cooled down	using
sugar, food containing sugar	yes	---	a scraper*
plastics, tin foil	yes	---	
limescale and water rings	---	yes	cleaner for glass ceramic or stainless steel*
fat splashes	---	yes	
shiny metallic discolouration	---	yes	

*Scrapers and cleaners for glass ceramic and stainless steel can be purchased in specialized shops



Remove stubborn residues with a cleaner for glass ceramic or stainless steel



Scratches or dark stains on the glass ceramic that cannot be removed do not however affect the functioning of the appliance.

8.3.1 Tools – FTP Server Test

The **Tools – FTP Server Test** page allows you to test the **FTP Server Settings** of the Camera.



Click on **Test** to perform the test. A jpeg file will be uploaded to the FTP server you specified.


8.3.2 Tools – E-mail Test

The **Tools – E-mail Test** page allows you to test the **E-mail Settings** of the Camera.



Click on **Test** to perform the test. An e-mail will be sent to the e-mail account you specified.

CHANGING SETUP VALUES (CONTINUED)

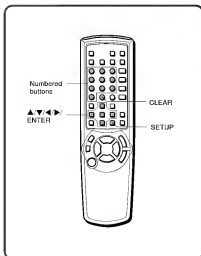

Disc Audio

The audio sound track language on a DVD disc can be changed. If the language selected is not available on the disc, the original language designated by each disc will be selected.

- 1** At the **SETUP** menu, press **▲/▼** to select "Disc Audio" and press **▶**.



- 2** Press **▲/▼** to select the desired language and press **ENTER**.

Original :	The original language of each disc will be selected.
English :	The English will be selected.
French :	The French will be selected.
German :	The German will be selected.
Spanish :	The Spanish will be selected.
Italian :	The Italian will be selected.
Chinese :	The Chinese will be selected.
Polish :	The Polish will be selected.
Hungarian :	The Hungarian will be selected.
Russian :	The Russian will be selected.
Other :	Another language can be selected. You can input a 4-digit language code. (Refer to the language codes on page 47. Press CLEAR if an incorrect language code is entered.)

OSD Messages

#	Condition	Message Reminder
1	Message	Fan Fail - the system fan is not working Fan Fail Lamp will automatically turn off soon Projector Overheated - the projector has exceeded its recommended operating temperature and must be allowed to cool down before it is used. Please also check the dust filters if they are installed. If the dust filter is clogged with dust, please clean it. Projector Overheated Lamp will automatically turn off soon Replace the lamp - the lamp is about to reach its maximum lifetime. Prepare to replace it soon. Lamp is approaching the end of its useful life in full power operation. Replacement suggested!

folder name will be highlighted inside of an editing box.

6. Type in the new name for the folder, and press the Return (8) key on the keyboard.
The new name will appear next to the folder and will be changed on the Player.
7. When you have finished and want to disconnect the Player from your PC, single-click on the "Safely Remove Hardware" icon in the System Tray at the right-hand end of the Windows Taskbar (located at the bottom of the screen), and then single-click on "Safely Remove USB Mass Storage Device – Drive (E:).
After a few seconds, a text bubble will appear tell you that it is safe to remove the connection between the Player and the PC.

Digital Rights Management (DRM)

DRM (Digital Rights Management) is new technology for securing WMA files. This standard is in common use by on-line music stores that allow you to purchase music on a one-off basis or via a fixed-price monthly contract.

This Player *DOES NOT* support files secured with the DRM technology; only *unsecured* WMA files can be played.

Technical Specification

Dimensions	58mm x 40mm x 8mm (H x W x D)	
Weight	25 grams	
Flash memory size	128Mb-1Gb (depending on model purchased)	
PC connection	USB2.0 (FS)	
	Read:	1000Kb
	Write:	1000-900Kb
OLED Screen Size	96 x 26 pixels (Width x Height)	
On-Board Battery	Max Play time = 10 hours	
Acceptable formats	Music	MP3, WMA
Record	<i>Sample rate:</i>	8Khz
	<i>Recording formats:</i>	WAV

4 Licensing SMP

This section provides information about SMP licensing.

Licensing SMP

One license key is required for each successful P2P, P2V, V2P, or V2V migration. SMP licenses, unlike other ProLiant Essentials licenses, do not need to be deployed to servers.

SMP licenses are consumed after a successful migration.

For more information or to purchase licenses, see <http://www.hp.com/go/migrate>.

SMP licensing keys

To use P2P or SMP 2.x Subscription Keys in SMP, you must obtain a new license key from the HP Password Center. Before calling, have the following information available:

- Product number
- Product name
- Number of license remaining
- Number of days remaining

To determine the number of licenses or days remaining prior to migrating, choose one of the following procedures:

- P2P keys:
 1. Launch the P2P application station.
 2. Click the **License** tab.
 3. From the license key list, you can view the information.
- SMP 2.x keys:
 1. Log in to HP SIM.
 2. Select **Deploy**→**License Manager**→**HP Insight Server Migration software for ProLiant**.
 3. Click **Manage Licenses**.
 4. From the license key list, you can view the information.

Licensing requirements

- A P2P or V2P migration can only be performed if at least one valid P2P license or SMP license for X2P is available.
- A P2V or V2V migration can only be performed if at least one valid SMP license or SMP license for X2V is available.

Licensing options

The licensing key list on the **License** tab reports the numbers and types of SMP license keys available and enables you to enter new license keys.

The following types of SMP licenses are available for purchase:

- Subscription license—This type of SMP license enables the consumption of an unlimited number of migrations for one year. The subscription period begins after the first license is consumed.
- Demo license—This type of SMP license enables a specific number of migrations for a specific period. The subscription begins after the first license is consumed.
- Flexible Quantity license—This type of SMP license enables the consumption of a license from available license keys each time a migration is successful.

If several keys are installed, the licenses are processed in the following order:

3) Adjustment for DJ480

fc: Test Center frequency

DJ480C1..... fc = 410.00MHz

DJ480C2..... fc = 460.00MHz

DJ480C3, T, E..... fc = 440.00MHz


TX , PLL Adjustment

Item	Condition	Measurement		Adjustment			Specification s/ Remarks
		Test-equipment	Terminal	Unit	Parts	Method	
Reference Frequency	Frequency: fc PTT: ON	Frequency Counter	ANT	RF	TC1		fc +/-100Hz
Power	Frequency: fc PTT: ON Power: High	Power Meter	ANT	RF	VR1		5.0 +/-0.2W
	Freq: fc PTT: ON Power: Low				VR5		0.4 +/-0.05W
MIC DEV	Frequency: fc AG output: 1kHz, -30dBm PTT: ON Power: Low	AF OSC Linear Detector	ANT	RF	VR2		4.3kHz +/-0.2kHz/DEV
DTMF DEV (option)	Frequency: fc PTT: ON Power: Low Push "*" key on keypad			DTMF	VR401		3.0kHz +/-0.5kHz/DEV
TONE 88.5Hz DEV (option)	Frequency: fc PTT: ON Power: Low TONE 88.5Hz set			TONE	VR701		0.8kHz +/-0.1kHz/DEV

RX Adjustment

Item	Condition	Measurement		Adjustment			Specification s/ Remarks
		Test-equipment	Terminal	Unit	Parts	Method	
RX Front End	Frequency: fc SSG mod: 1kHz 3.5kHz DEV	SSG Oscilloscope AF Voltmeter Distortion Meter	Speaker	RF	L9 - L13	12dB SINAD: MAX	12dB SINAD -6.0dBμV (EMF)

ENGINE WELDERS /LN-8 CONNECTION DIAGRAM

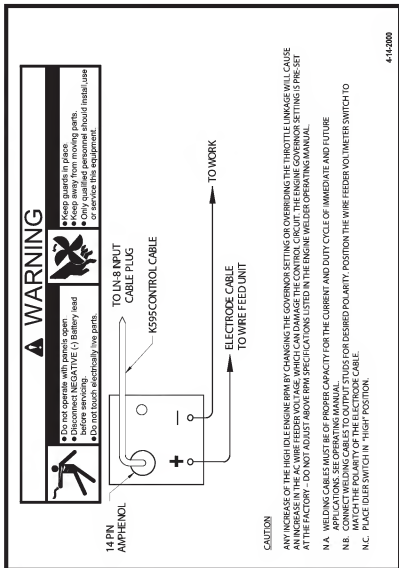

System Programming (cont'd)

Guidelines (continued):

- Pressing Delete when changing a closing time will tell the system that no closing will occur for that schedule that day (up to midnight). Use this to tell the system when there is an early morning closing the next day. You must also program a 12:00 AM opening and a closing time (i.e., 3:00 AM) the next day.
- If your schedule is unpredictable, you may need to program a No Close time period. Upon opening the group, a timer can be preset with a number of hours and minutes you will be open that day. A closing timer will start when 20 minutes remain. A closing warning will start when only 5 minutes remain. If the warning and reminder are ignored, and the group is not closed, a No Close signal will be sent to the ADT Customer Monitoring Center. To program a No Close time, first select the second schedule for the desired day. Second, delete the second opening time by pressing Change, Open time, Delete. Third, enter the number of hours and minutes you will be open on that day as the second closing time. For example, if you want two hours and 30 minutes, press Change, Close time, 0, 2, 3, 0, AM. Repeat the procedure for each day that this feature is desired.
- AM is used for less than 12 hours. If 12 to 24 hours is desired, subtract 12 hours from the desired length of time, enter the remainder, and press PM. For example, if you want 14 hours and 20 minutes, press Change, Close time, 0, 2, 2, 0, PM.
- The No Close time will take effect only when the group is opened. If you want the new time to take effect NOW, first turn on the group and then turn it off.
- The programming of the first schedule for each day is optional. If you do program the first schedule, openings outside the schedule can be restricted. For example, a first schedule opening time of 5:00 AM and a first schedule close time of 10:00 PM may restrict certain users from midnight to 5AM and from 10PM to midnight. Persons who open anytime will be required to close the group in the specified time period entered in the second close schedule as specified above.

Changing Auto On/Off Schedule

Your FOCUS® 200 PLUS security system can accommodate an Auto On/Off feature. If enabled, the Auto On/Off feature enables your system to automatically turn itself on and off according to the daily operating schedule (permanent or temporary) that you have assigned. **The Auto On/Off feature is automatically deleted on holidays and can be cancelled by deleting a schedule.**

Replacing an Ink Tank

This section explains the way to confirm the ink status and the procedure to replace ink tanks.

When ink runs out or other errors occur, the Alarm lamp flashes orange to inform you of the error. See "Alarm Lamp Flashes Orange" on page 67 and confirm how to handle it. When printing from your computer, error messages appear on your computer screen as well.

Note

- For information on the compatible ink tanks, refer to the back cover of this guide.
 - If printing becomes faint or white streaks appear despite sufficient ink levels, see "When Printing Becomes Faint or Colors Are Incorrect" on page 24.
-

■ Getting the Ink Status Information

You can confirm the status of ink tanks in the following two ways:

- "With the Ink Lamps" on page 43
- "With the Computer Screen" on page 44

● With the Ink Lamps

You can confirm the status of each ink tank by the ink lamps. Open the Print Head Cover of the printer to confirm how the ink lamps light or flash.

● Ink lamp is on

The ink tank is correctly set and there is enough ink remaining to print.

● Ink lamp is flashing

Flashing slowly (at around 3-second intervals)



Ink is low. You can continue printing for a while, but we recommend you to have a new ink tank available.

Flashing quickly (at around 1-second intervals)



The ink tank is empty. Replace it with a new one.

● Ink lamp is off

The tank is not set properly or the function for detecting the remaining ink level is disabled.

If the ink tank is not set properly, press the  mark on the ink tank until the tank clicks into place.

If the function for detecting the remaining ink level is disabled, replace the ink tank with a new one. See "Replacing Ink Tanks" on page 45.

If the lamps are still off after reinserting the ink tanks, there has been an error and the printer cannot print. Confirm the number of times the Alarm lamp is flashing, take the appropriate action to resolve the error. See "Alarm Lamp Flashes Orange" on page 67.

>ETHERNET SWITCH STATUS > RX PACKETS DROPPED

Displays a counter of all received data packets that were unable to be processed due to congestion inside the TRACER 5045 bridge (for both the local and remote TRACER 5045 units). Use this data as an indicator of congestion inside the TRACER 5045 bridge.

>ETHERNET SWITCH STATUS > RX PACKET ERRORS

Displays a counter of all received data packets that are greater than or equal to 64 bytes in length and have either a FCS error or an alignment error (for both the local and remote TRACER units).